



How to Change the Stream Type of Live View and Playback on UNV-Link?

Title	How to Change the Stream Type of Live View and Playback on UNV-Link?	Version:	V1.0
Product	SMB	Date	7/15/2024

How to Change the Stream Type of Live View and Playback on UNV-Link?


Description

Note: This method is applicable in most scenarios. If this method does not solve your problem, it is recommended to consult our Tech Support Team.

https://global.uniview.com/Support/Service_Hotline/

Operating Steps

Step 1 Go to **UNV-Link** and click the image of the device you wish to view

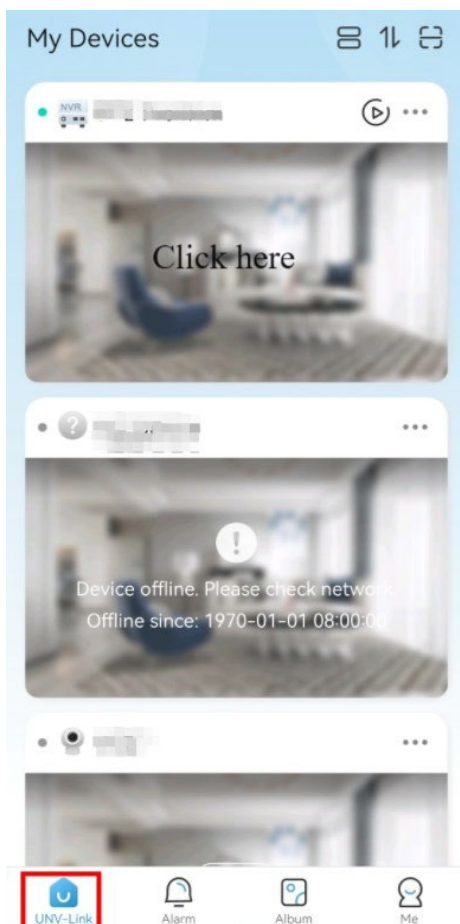

Step 2 Select and click the camera channel you want to view.

Title	How to Change the Stream Type of Live View and Playback on UNV-Link?	Version:	V1.0
Product	SMB	Date	7/15/2024





Step 3 Change the stream type for live view and playback.

You can change resolutions of the live view or playback from the Live View or Playback interfaces on UNV-Link by switching the image Quality between **Low**, **Medium** and **High**.

Title	How to Change the Stream Type of Live View and Playback on UNV-Link?	Version:	V1.0
Product	SMB	Date	7/15/2024



Live View Playback Message

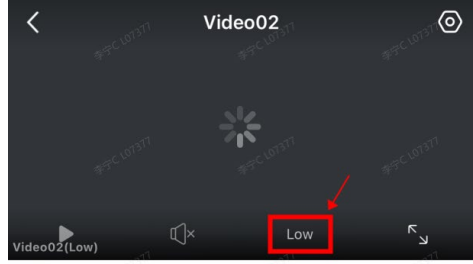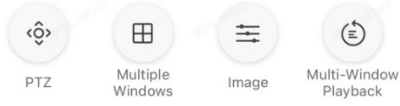

Live View Playback Message

