

How to Share and Cancel Sharing on EZCloud Website and UNV-Link?



| Title | How to Share and Cancel Sharing on EZCloud Website and UNV-link? | Version: | V1.1 |
|---------|--|----------|-----------|
| Product | SMB | Date | 4/25/2025 |

How to Share and Cancel Sharing on EZCloud Website and UNV-Link?

Description

Note: This method is applicable in most scenarios. If this method does not solve your problem, it is recommended to consult our Tech Support Team. https://global.uniview.com/Support/Service_Hotline/

Operating Steps

How to share a device?


Note: Different users can also login to the same account on different cellphones to view devices on that account.

Method 1 Share from EZCloud website

Step 1 Log into the EZCloud website https://global.ezcloud.uniview.com/login

Go to **Device management>My Cloud Devices**. Click on the operation column.

Note: Only devices under My Cloud Devices can be shared.

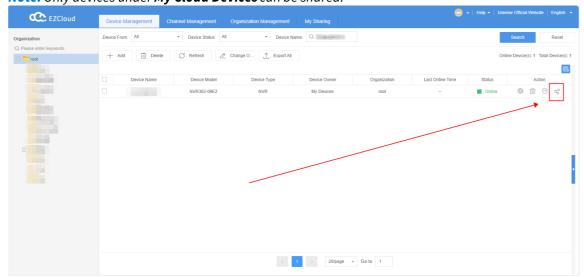


Step 2 Enter the other user's EZCloud account (username/email address) to complete the sharing.

Permissions: Admin is the default user with full operation permissions. You can also share a device to a user with limited permissions (It is required to add that user on the device's web or GUI first).



| Title | How to Share and Cancel Sharing on EZCloud Website and UNV-link? | Version: | V1.1 |
|---------|--|----------|-----------|
| Product | SMB | Date | 4/25/2025 |

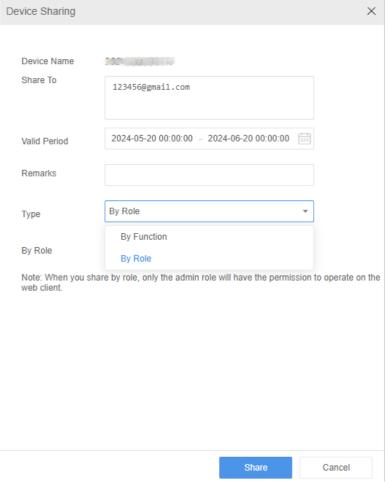

Note:


- 1. Make sure the person you want to share the device to has signed up for the EZCloud account as well.
- 2. Sharing can be done only when the two accounts stay in the same region.

Method 2 Share from UNV-Link

Step 1 Log into your UNV-Link and go to the devices page. Click • • • on the device you want to share, and click **Share**.



| Title | How to Share and Cancel Sharing on EZCloud Website and UNV-link? | Version: | V1.1 |
|---------|--|----------|-----------|
| Product | SMB | Date | 4/25/2025 |

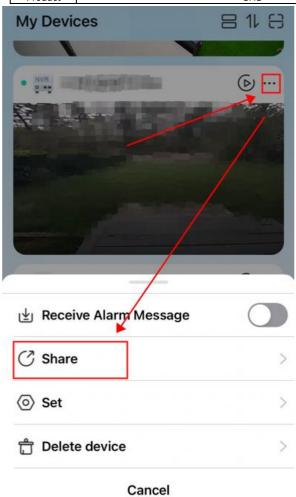


Step 2 Enter the email/username/phone number of the user you wish to share the device with and set up the valid period, select permissions you want the user to have.

Note: Devices shared by Function can only be viewed on the app. They will not show on EZStation when you log in the cloud account.



| Title | How to Share and Cancel Sharing on EZCloud Website and UNV-link? | Version: | V1.1 |
|---------|--|----------|-----------|
| Product | SMB | Date | 4/25/2025 |

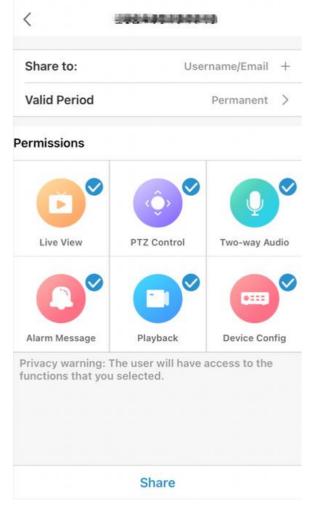


How to cancel sharing?

Method 1 Cancel the Sharing from EZCloud Website

Step 1 Log into the EZCloud website https://global.ezcloud.uniview.com/login

Step 2 Go to **My Sharing**, click in the operation column.

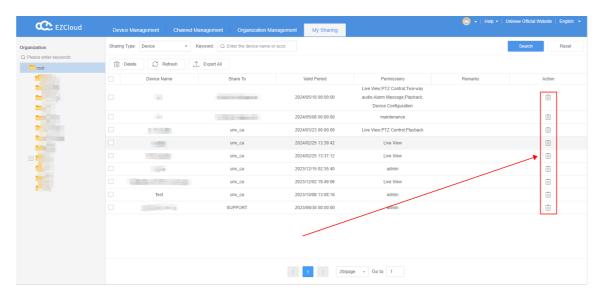



| Title | How to Share and Cancel Sharing on EZCloud Website and UNV-link? | Version: | V1.1 |
|---------|--|----------|-----------|
| Product | SMB | Date | 4/25/2025 |

Method 2 Cancel the Sharing from UNV-Link

 $\textbf{Step 1} \ \mathsf{Log} \ \mathsf{into} \ \mathsf{your} \ \mathsf{UNV-Link} \ \mathsf{and} \ \mathsf{go} \ \mathsf{to} \ \textbf{Me}.$

Step 2 Click on **Sharing Management**, select the sharing record and click **Stop Sharing** to cancel sharing.

